

# SD Memory Card Compatibility Information for Sony® Digital Cameras

## Important Information:

- This "Compatibility Chart" only provides compatibility testing results for the Memory Card applications listed in each product's instruction manual with Memory Stick media types listed below.
- This chart does not guarantee support for all memory card media types' performance nor compatibility among memory card media compliant products.
- Attach a dedicated adapter to use microSD/microSDHC memory card in a slot for standard size SD/SDHC memory card.
- The Memory Stick media capacity indicated on the packaging will differ from actual usable capacity. A portion of the memory is used for data management file functions.
- This compatibility chart and specifications are subject to change without notice.

## Notes:

46	The SRAC-A1 adapter must be attached to use microSD/microSDHC in a slot for SD/SDHC media.
47	This SD Card may not be able to record or play video.
50	This media cannot be used as file system is different.
51	Not support the high speed data transfer for UHS-I.
53	This media is not compatible with XAVC S movie mode.



SD Memory Card	
----------------	--

[illegible]

SD Memory Card

Camera	SF-128UY	SF-16BF	SF-16C4	SF-16N4	SF-16NX	SF-16U4	SF-16U6	SF-16UX	SF-16UY	SF-2B4
DSC-TF1	-	X	X	X	X	X	X	X	X	X
DSC-TX1	-	X	X	X	X	X	X	X	X	X
DSC-TX10	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-TX100V	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-TX20	-	X	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-TX200V	-	X	X	X	X	X	X	X	X	X
DSC-TX30	-	X	X	X	X	X	X	X	X	X
DSC-TX5	-	-	-	-	-	-	-	-	-	OK
DSC-TX55	-	X	X	X	X	X	X	X	X	X
DSC-TX66	-	X	X	X	X	X	X	X	X	X
DSC-TX7	-	-	-	-	-	-	-	-	-	OK
DSC-TX9	-	-	-	-	-	-	-	-	-	OK
DSC-V1	-	X	X	X	X	X	X	X	X	X
DSC-V3	-	X	X	X	X	X	X	X	X	X
DSC-W1	-	X	X	X	X	X	X	X	X	X
DSC-W110	-	X	X	X	X	X	X	X	X	X
DSC-W120	-	X	X	X	X	X	X	X	X	X
DSC-W170	-	X	X	X	X	X	X	X	X	X
DSC-W180	-	X	X	X	X	X	X	X	X	X
DSC-W190	-	X	X	X	X	X	X	X	X	X
DSC-W200	-	X	X	X	X	X	X	X	X	X
DSC-W210	-	X	X	X	X	X	X	X	X	X
DSC-W215	-	X	X	X	X	X	X	X	X	X
DSC-W220	-	X	X	X	X	X	X	X	X	X
DSC-W230	-	X	X	X	X	X	X	X	X	X
DSC-W270	-	X	X	X	X	X	X	X	X	X
DSC-W275	-	X	X	X	X	X	X	X	X	X
DSC-W290	-	X	X	X	X	X	X	X	X	X
DSC-W30	-	X	X	X	X	X	X	X	X	X
DSC-W310	-	-	-	-	-	-	-	-	-	OK
DSC-W320	-	-	-	-	-	-	-	-	-	OK
DSC-W330	-	-	-	-	-	-	-	-	-	OK
DSC-W35	-	X	X	X	X	X	X	X	X	X
DSC-W350	-	-	-	-	-	-	-	-	-	OK
DSC-W370	-	-	-	-	-	-	-	-	-	OK
DSC-W390	-	-	-	-	-	-	-	-	-	OK
DSC-W5	-	X	X	X	X	X	X	X	X	X
DSC-W50	-	X	X	X	X	X	X	X	X	X
DSC-W510	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W530	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W550	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W560	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK

SD Memory Card

Camera	SF-128UY	SF-16BF	SF-16C4	SF-16N4	SF-16NX	SF-16U4	SF-16U6	SF-16UX	SF-16UY	SF-2B4
DSC-W570	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W570D	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W610	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W620	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W630	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W650	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W670	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W690	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W7	-	X	X	X	X	X	X	X	X	X
DSC-W710	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W730	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-W80	-	X	X	X	X	X	X	X	X	X
DSC-W800	-	OK	OK	OK	OK	OK	OK	OK *5	OK	OK
DSC-W80HDPR	-	X	X	X	X	X	X	X	X	X
DSC-W830	-	OK	OK	OK	OK	OK	OK	OK *5	OK	OK
DSC-WX1	-	X	X	X	X	X	X	X	X	X
DSC-WX10	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX100	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX150	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX200	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX220	-	OK	OK	OK	OK	OK	OK	OK *5	OK	OK
DSC-WX300	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX350	-	OK	OK	OK	OK	OK	OK	OK *5	OK	OK
DSC-WX5	-	-	-	-	-	-	-	-	-	OK
DSC-WX50	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX60	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX7	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX70	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX80	-	OK	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK
DSC-WX9	-	-	OK	OK	OK	OK *5	OK *5	OK *5	OK *5	OK

SD Memory Card	
----------------	--

[illegible]

SD Memory Card

Camera	SF-2C1	SF-2N1	SF-2N1T	SF-32BF	SF-32C4	SF-32N4	SF-32NX	SF-32U4	SF-32U6	SF-32UX
DSC-P73	X	X	X	X	X	X	X	X	X	X
DSC-P8	X	X	X	X	X	X	X	X	X	X
DSC-QX10	X	X	X	X	X	X	X	X	X	X
DSC-QX100	X	X	X	X	X	X	X	X	X	X
DSC-R1	X	X	X	X	X	X	X	X	X	X
DSC-RX1	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-RX10	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
DSC-RX100	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-RX100M2	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-RX100M3	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5
DSC-RX1R	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-S2000	OK	OK	OK	-	-	-	-	-	-	-
DSC-S2100	OK	OK	OK	-	-	-	-	-	-	-
DSC-S40	X	X	X	X	X	X	X	X	X	X
DSC-S730	X	X	X	X	X	X	X	X	X	X
DSC-S930	X	X	X	X	X	X	X	X	X	X
DSC-S950	X	X	X	X	X	X	X	X	X	X
DSC-S980	X	X	X	X	X	X	X	X	X	X
DSC-T1	X	X	X	X	X	X	X	X	X	X
DSC-T10	X	X	X	X	X	X	X	X	X	X
DSC-T100	X	X	X	X	X	X	X	X	X	X
DSC-T110	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-T110D	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-T2	X	X	X	X	X	X	X	X	X	X
DSC-T20	X	X	X	X	X	X	X	X	X	X
DSC-T200	X	X	X	X	X	X	X	X	X	X
DSC-T3	X	X	X	X	X	X	X	X	X	X
DSC-T30	X	X	X	X	X	X	X	X	X	X
DSC-T300	X	X	X	X	X	X	X	X	X	X
DSC-T33	X	X	X	X	X	X	X	X	X	X
DSC-T5	X	X	X	X	X	X	X	X	X	X
DSC-T50	X	X	X	X	X	X	X	X	X	X
DSC-T500	X	X	X	X	X	X	X	X	X	X
DSC-T7	X	X	X	X	X	X	X	X	X	X
DSC-T70	X	X	X	X	X	X	X	X	X	X
DSC-T700	X	X	X	X	X	X	X	X	X	X
DSC-T77	X	X	X	X	X	X	X	X	X	X
DSC-T9	X	X	X	X	X	X	X	X	X	X
DSC-T90	X	X	X	X	X	X	X	X	X	X
DSC-T900	X	X	X	X	X	X	X	X	X	X
DSC-T99	OK	OK	OK	-	-	-	-	-	-	-
DSC-T99D	OK	OK	OK	-	-	-	-	-	-	-

SD Memory Card

Camera	SF-2C1	SF-2N1	SF-2N1T	SF-32BF	SF-32C4	SF-32N4	SF-32NX	SF-32U4	SF-32U6	SF-32UX
DSC-TF1	X	X	X	X	X	X	X	X	X	X
DSC-TX1	X	X	X	X	X	X	X	X	X	X
DSC-TX10	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-TX100V	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-TX20	OK	OK	OK	X	OK	OK	OK	OK *5	OK *5	OK *5
DSC-TX200V	X	X	X	X	X	X	X	X	X	X
DSC-TX30	X	X	X	X	X	X	X	X	X	X
DSC-TX5	OK	OK	OK	-	-	-	-	-	-	-
DSC-TX55	X	X	X	X	X	X	X	X	X	X
DSC-TX66	X	X	X	X	X	X	X	X	X	X
DSC-TX7	OK	OK	OK	-	-	-	-	-	-	-
DSC-TX9	OK	OK	OK	-	-	-	-	-	-	-
DSC-V1	X	X	X	X	X	X	X	X	X	X
DSC-V3	X	X	X	X	X	X	X	X	X	X
DSC-W1	X	X	X	X	X	X	X	X	X	X
DSC-W110	X	X	X	X	X	X	X	X	X	X
DSC-W120	X	X	X	X	X	X	X	X	X	X
DSC-W170	X	X	X	X	X	X	X	X	X	X
DSC-W180	X	X	X	X	X	X	X	X	X	X
DSC-W190	X	X	X	X	X	X	X	X	X	X
DSC-W200	X	X	X	X	X	X	X	X	X	X
DSC-W210	X	X	X	X	X	X	X	X	X	X
DSC-W215	X	X	X	X	X	X	X	X	X	X
DSC-W220	X	X	X	X	X	X	X	X	X	X
DSC-W230	X	X	X	X	X	X	X	X	X	X
DSC-W270	X	X	X	X	X	X	X	X	X	X
DSC-W275	X	X	X	X	X	X	X	X	X	X
DSC-W290	X	X	X	X	X	X	X	X	X	X
DSC-W30	X	X	X	X	X	X	X	X	X	X
DSC-W310	OK	OK	OK	-	-	-	-	-	-	-
DSC-W320	OK	OK	OK	-	-	-	-	-	-	-
DSC-W330	OK	OK	OK	-	-	-	-	-	-	-
DSC-W35	X	X	X	X	X	X	X	X	X	X
DSC-W350	OK	OK	OK	-	-	-	-	-	-	-
DSC-W370	OK	OK	OK	-	-	-	-	-	-	-
DSC-W390	OK	OK	OK	-	-	-	-	-	-	-
DSC-W5	X	X	X	X	X	X	X	X	X	X
DSC-W50	X	X	X	X	X	X	X	X	X	X
DSC-W510	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W530	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W550	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W560	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5



SD Memory Card

Camera	SF-2C1	SF-2N1	SF-2N1T	SF-32BF	SF-32C4	SF-32N4	SF-32NX	SF-32U4	SF-32U6	SF-32UX
DSC-W570	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W570D	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W610	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W620	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W630	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W650	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W670	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W690	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W7	X	X	X	X	X	X	X	X	X	X
DSC-W710	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W730	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-W80	X	X	X	X	X	X	X	X	X	X
DSC-W800	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK *5
DSC-W80HDPR	X	X	X	X	X	X	X	X	X	X
DSC-W830	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK *5
DSC-WX1	X	X	X	X	X	X	X	X	X	X
DSC-WX10	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX100	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX150	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX200	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX220	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK *5
DSC-WX300	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX350	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK *5
DSC-WX5	OK	OK	OK	-	-	-	-	-	-	-
DSC-WX50	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX60	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX7	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX70	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX80	OK	OK	OK	OK	OK	OK	OK	OK *5	OK *5	OK *5
DSC-WX9	OK	OK	OK	-	OK	OK	OK	OK *5	OK *5	OK *5

SD Memory Card

Camera	SF-32UX2	SF-32UY	SF-32UZ	SF-4B4	SF-4BF	SF-4C4	SF-4N4	SF-4N4D	SF-4U4	SF-4U6
DSC-F707	-	X	-	X	X	X	X	X	X	X
DSC-F717	-	X	-	X	X	X	X	X	X	X
DSC-F828	-	X	-	X	X	X	X	X	X	X
DSC-F88	-	X	-	X	X	X	X	X	X	X
DSC-G1	-	X	-	X	X	X	X	X	X	X
DSC-G3	-	X	-	X	X	X	X	X	X	X
DSC-H1	-	X	-	X	X	X	X	X	X	X
DSC-H10	-	X	-	X	X	X	X	X	X	X
DSC-H20	-	X	-	X	X	X	X	X	X	X
DSC-H200	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-H3	-	X	-	X	X	X	X	X	X	X
DSC-H300	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-H400	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-H5	-	X	-	X	X	X	X	X	X	X
DSC-H50	-	X	-	X	X	X	X	X	X	X
DSC-H55	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-H7	-	X	-	X	X	X	X	X	X	X
DSC-H70	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-H90	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-HX1	-	X	-	X	X	X	X	X	X	X
DSC-HX100V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX10V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX200V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX20V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX300	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-HX30V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX400V	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-HX50V	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-HX5V	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX60V	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-HX7V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-HX9V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-J10	-	X	-	X	X	X	X	X	X	X
DSC-L1	-	X	-	X	X	X	X	X	X	X
DSC-M1	-	X	-	X	X	X	X	X	X	X
DSC-M2	-	X	-	X	X	X	X	X	X	X
DSC-N1	-	X	-	X	X	X	X	X	X	X
DSC-N2	-	X	-	X	X	X	X	X	X	X
DSC-P10	-	X	-	X	X	X	X	X	X	X
DSC-P100	-	X	-	X	X	X	X	X	X	X
DSC-P150	-	X	-	X	X	X	X	X	X	X
DSC-P200	-	X	-	X	X	X	X	X	X	X

SD Memory Card

Camera	SF-32UX2	SF-32UY	SF-32UZ	SF-4B4	SF-4BF	SF-4C4	SF-4N4	SF-4N4D	SF-4U4	SF-4U6
DSC-P73	-	X	-	X	X	X	X	X	X	X
DSC-P8	-	X	-	X	X	X	X	X	X	X
DSC-QX10	-	X	-	X	X	X	X	X	X	X
DSC-QX100	-	X	-	X	X	X	X	X	X	X
DSC-R1	-	X	-	X	X	X	X	X	X	X
DSC-RX1	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-RX10	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-RX100	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-RX100M2	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-RX100M3	-	OK *5	-	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5
DSC-RX1R	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-S2000	-	-	-	OK	-	-	OK	OK	OK *5	OK *5
DSC-S2100	-	-	-	OK	-	-	OK	OK	OK *5	OK *5
DSC-S40	-	X	-	X	X	X	X	X	X	X
DSC-S730	-	X	-	X	X	X	X	X	X	X
DSC-S930	-	X	-	X	X	X	X	X	X	X
DSC-S950	-	X	-	X	X	X	X	X	X	X
DSC-S980	-	X	-	X	X	X	X	X	X	X
DSC-T1	-	X	-	X	X	X	X	X	X	X
DSC-T10	-	X	-	X	X	X	X	X	X	X
DSC-T100	-	X	-	X	X	X	X	X	X	X
DSC-T110	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-T110D	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-T2	-	X	-	X	X	X	X	X	X	X
DSC-T20	-	X	-	X	X	X	X	X	X	X
DSC-T200	-	X	-	X	X	X	X	X	X	X
DSC-T3	-	X	-	X	X	X	X	X	X	X
DSC-T30	-	X	-	X	X	X	X	X	X	X
DSC-T300	-	X	-	X	X	X	X	X	X	X
DSC-T33	-	X	-	X	X	X	X	X	X	X
DSC-T5	-	X	-	X	X	X	X	X	X	X
DSC-T50	-	X	-	X	X	X	X	X	X	X
DSC-T500	-	X	-	X	X	X	X	X	X	X
DSC-T7	-	X	-	X	X	X	X	X	X	X
DSC-T70	-	X	-	X	X	X	X	X	X	X
DSC-T700	-	X	-	X	X	X	X	X	X	X
DSC-T77	-	X	-	X	X	X	X	X	X	X
DSC-T9	-	X	-	X	X	X	X	X	X	X
DSC-T90	-	X	-	X	X	X	X	X	X	X
DSC-T900	-	X	-	X	X	X	X	X	X	X
DSC-T99	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-T99D	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5

SD Memory Card

Camera	SF-32UX2	SF-32UY	SF-32UZ	SF-4B4	SF-4BF	SF-4C4	SF-4N4	SF-4N4D	SF-4U4	SF-4U6
DSC-TF1	-	X	-	X	X	X	X	X	X	X
DSC-TX1	-	X	-	X	X	X	X	X	X	X
DSC-TX10	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-TX100V	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-TX20	-	OK *5	-	OK	X	OK	OK	OK	OK *5	OK *5
DSC-TX200V	-	X	-	X	X	X	X	X	X	X
DSC-TX30	-	X	-	X	X	X	X	X	X	X
DSC-TX5	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-TX55	-	X	-	X	X	X	X	X	X	X
DSC-TX66	-	X	-	X	X	X	X	X	X	X
DSC-TX7	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-TX9	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-V1	-	X	-	X	X	X	X	X	X	X
DSC-V3	-	X	-	X	X	X	X	X	X	X
DSC-W1	-	X	-	X	X	X	X	X	X	X
DSC-W110	-	X	-	X	X	X	X	X	X	X
DSC-W120	-	X	-	X	X	X	X	X	X	X
DSC-W170	-	X	-	X	X	X	X	X	X	X
DSC-W180	-	X	-	X	X	X	X	X	X	X
DSC-W190	-	X	-	X	X	X	X	X	X	X
DSC-W200	-	X	-	X	X	X	X	X	X	X
DSC-W210	-	X	-	X	X	X	X	X	X	X
DSC-W215	-	X	-	X	X	X	X	X	X	X
DSC-W220	-	X	-	X	X	X	X	X	X	X
DSC-W230	-	X	-	X	X	X	X	X	X	X
DSC-W270	-	X	-	X	X	X	X	X	X	X
DSC-W275	-	X	-	X	X	X	X	X	X	X
DSC-W290	-	X	-	X	X	X	X	X	X	X
DSC-W30	-	X	-	X	X	X	X	X	X	X
DSC-W310	-	-	-	OK	-	-	OK	OK	OK *5	OK *5
DSC-W320	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W330	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W35	-	X	-	X	X	X	X	X	X	X
DSC-W350	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W370	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W390	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W5	-	X	-	X	X	X	X	X	X	X
DSC-W50	-	X	-	X	X	X	X	X	X	X
DSC-W510	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W530	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-W550	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W560	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5

SD Memory Card

Camera	SF-32UX2	SF-32UY	SF-32UZ	SF-4B4	SF-4BF	SF-4C4	SF-4N4	SF-4N4D	SF-4U4	SF-4U6
DSC-W570	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W570D	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W610	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W620	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W630	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-W650	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-W670	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-W690	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-W7	-	X	-	X	X	X	X	X	X	X
DSC-W710	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-W730	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-W80	-	X	-	X	X	X	X	X	X	X
DSC-W800	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-W80HDPR	-	X	-	X	X	X	X	X	X	X
DSC-W830	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-WX1	-	X	-	X	X	X	X	X	X	X
DSC-WX10	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX100	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX150	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX200	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-WX220	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-WX300	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-WX350	-	OK	-	OK	OK	OK	OK	OK	OK	OK
DSC-WX5	-	-	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX50	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX60	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-WX7	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX70	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5
DSC-WX80	-	OK *5	-	OK	OK	OK	OK	OK	OK *5	OK *5
DSC-WX9	-	OK *5	-	OK	-	OK	OK	OK	OK *5	OK *5

SD Memory Card

Camera	SF-64BF	SF-64C4	SF-64N4	SF-64UX	SF-64UX2	SF-64UY	SF-64UZ	SF-8B4	SF-8BF	SF-8C4
DSC-F707	X	X	X	X	-	X	-	X	X	X
DSC-F717	X	X	X	X	-	X	-	X	X	X
DSC-F828	X	X	X	X	-	X	-	X	X	X
DSC-F88	X	X	X	X	-	X	-	X	X	X
DSC-G1	X	X	X	X	-	X	-	X	X	X
DSC-G3	X	X	X	X	-	X	-	X	X	X
DSC-H1	X	X	X	X	-	X	-	X	X	X
DSC-H10	X	X	X	X	-	X	-	X	X	X
DSC-H20	X	X	X	X	-	X	-	X	X	X
DSC-H200	X	X	X	X	-	X	-	OK	OK	OK
DSC-H3	X	X	X	X	-	X	-	X	X	X
DSC-H300	OK	OK	OK	OK *5	-	OK *5	-	OK	OK	OK
DSC-H400	OK	OK	OK	OK *5	-	OK	-	OK	OK	OK
DSC-H5	X	X	X	X	-	X	-	X	X	X
DSC-H50	X	X	X	X	-	X	-	X	X	X
DSC-H55	-	-	-	-	-	-	-	OK	-	OK
DSC-H7	X	X	X	X	-	X	-	X	X	X
DSC-H70	-	-	-	-	-	-	-	OK	-	OK
DSC-H90	OK	OK	OK	OK *5	-	OK *5	-	OK	OK	OK
DSC-HX1	X	X	X	X	-	X	-	X	X	X
DSC-HX100V	-	-	-	-	-	-	-	OK	-	OK
DSC-HX10V	-	OK	OK	OK *5	-	OK *5	-	OK	-	OK
DSC-HX200V	-	OK	OK	OK *5	-	OK *5	-	OK	-	OK
DSC-HX20V	-	OK	OK	OK *5	-	OK *5	-	OK	-	OK
DSC-HX300	OK	OK	OK	OK *5	-	OK *5	-	OK	OK	OK
DSC-HX30V	-	OK	OK	OK *5	-	OK *5	-	OK	-	OK
DSC-HX400V	OK	OK	OK	OK *5	-	OK	-	OK	OK	OK
DSC-HX50V	OK	OK	OK	OK *5	-	OK *5	-	OK	OK	OK
DSC-HX5V	-	-	-	-	-	-	-	OK	-	OK
DSC-HX60V	OK	OK	OK	OK *5	-	OK	-	OK	OK	OK
DSC-HX7V	-	-	-	-	-	-	-	OK	-	OK
DSC-HX9V	-	-	-	-	-	-	-	OK	-	OK
DSC-J10	X	X	X	X	-	X	-	X	X	X
DSC-L1	X	X	X	X	-	X	-	X	X	X
DSC-M1	X	X	X	X	-	X	-	X	X	X
DSC-M2	X	X	X	X	-	X	-	X	X	X
DSC-N1	X	X	X	X	-	X	-	X	X	X
DSC-N2	X	X	X	X	-	X	-	X	X	X
DSC-P10	X	X	X	X	-	X	-	X	X	X
DSC-P100	X	X	X	X	-	X	-	X	X	X
DSC-P150	X	X	X	X	-	X	-	X	X	X
DSC-P200	X	X	X	X	-	X	-	X	X	X

SD Memory Card	
----------------	--

[illegible]

[illegible][illegible]



SD Memory Card	
----------------	--

[illegible]

SD Memory Card

Camera	SF-8N4	SF-8NX	SF-8U4	SF-8U6	SF-8UX	SF-8UY	SF-G1UX2	SF-G1UY	SR-16A4	SR-16C4
DSC-F707	X	X	X	X	X	X	-	-	X	X
DSC-F717	X	X	X	X	X	X	-	-	X	X
DSC-F828	X	X	X	X	X	X	-	-	X	X
DSC-F88	X	X	X	X	X	X	-	-	X	X
DSC-G1	X	X	X	X	X	X	-	-	X	X
DSC-G3	X	X	X	X	X	X	-	-	X	X
DSC-H1	X	X	X	X	X	X	-	-	X	X
DSC-H10	X	X	X	X	X	X	-	-	X	X
DSC-H20	X	X	X	X	X	X	-	-	X	X
DSC-H200	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-H3	X	X	X	X	X	X	-	-	X	X
DSC-H300	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-H400	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-H5	X	X	X	X	X	X	-	-	X	X
DSC-H50	X	X	X	X	X	X	-	-	X	X
DSC-H55	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-H7	X	X	X	X	X	X	-	-	X	X
DSC-H70	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-H90	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX1	X	X	X	X	X	X	-	-	X	X
DSC-HX100V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-HX10V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX200V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX20V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX300	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX30V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX400V	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-HX50V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-HX5V	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-HX60V	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-HX7V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-HX9V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-J10	X	X	X	X	X	X	-	-	X	X
DSC-L1	X	X	X	X	X	X	-	-	X	X
DSC-M1	X	X	X	X	X	X	-	-	X	X
DSC-M2	X	X	X	X	X	X	-	-	X	X
DSC-N1	X	X	X	X	X	X	-	-	X	X
DSC-N2	X	X	X	X	X	X	-	-	X	X
DSC-P10	X	X	X	X	X	X	-	-	X	X
DSC-P100	X	X	X	X	X	X	-	-	X	X
DSC-P150	X	X	X	X	X	X	-	-	X	X
DSC-P200	X	X	X	X	X	X	-	-	X	X

SD Memory Card

Camera	SF-8N4	SF-8NX	SF-8U4	SF-8U6	SF-8UX	SF-8UY	SF-G1UX2	SF-G1UY	SR-16A4	SR-16C4
DSC-P73	X	X	X	X	X	X	-	-	X	X
DSC-P8	X	X	X	X	X	X	-	-	X	X
DSC-QX10	X	X	X	X	X	X	-	-	OK	OK
DSC-QX100	X	X	X	X	X	X	-	-	OK	OK
DSC-R1	X	X	X	X	X	X	-	-	X	X
DSC-RX1	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-RX10	OK	OK	OK	OK	OK	OK	-	-	OK *4	OK *4
DSC-RX100	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-RX100M2	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-RX100M3	OK *5	OK *5	OK *5	OK *5	OK *5	OK *5	-	-	OK *46 *5	OK *46 *5
DSC-RX1R	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-S2000	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-S2100	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-S40	X	X	X	X	X	X	-	-	X	X
DSC-S730	X	X	X	X	X	X	-	-	X	X
DSC-S930	X	X	X	X	X	X	-	-	X	X
DSC-S950	X	X	X	X	X	X	-	-	X	X
DSC-S980	X	X	X	X	X	X	-	-	X	X
DSC-T1	X	X	X	X	X	X	-	-	X	X
DSC-T10	X	X	X	X	X	X	-	-	X	X
DSC-T100	X	X	X	X	X	X	-	-	X	X
DSC-T110	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-T110D	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-T2	X	X	X	X	X	X	-	-	X	X
DSC-T20	X	X	X	X	X	X	-	-	X	X
DSC-T200	X	X	X	X	X	X	-	-	X	X
DSC-T3	X	X	X	X	X	X	-	-	X	X
DSC-T30	X	X	X	X	X	X	-	-	X	X
DSC-T300	X	X	X	X	X	X	-	-	X	X
DSC-T33	X	X	X	X	X	X	-	-	X	X
DSC-T5	X	X	X	X	X	X	-	-	X	X
DSC-T50	X	X	X	X	X	X	-	-	X	X
DSC-T500	X	X	X	X	X	X	-	-	X	X
DSC-T7	X	X	X	X	X	X	-	-	X	X
DSC-T70	X	X	X	X	X	X	-	-	X	X
DSC-T700	X	X	X	X	X	X	-	-	X	X
DSC-T77	X	X	X	X	X	X	-	-	X	X
DSC-T9	X	X	X	X	X	X	-	-	X	X
DSC-T90	X	X	X	X	X	X	-	-	X	X
DSC-T900	X	X	X	X	X	X	-	-	X	X
DSC-T99	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-T99D	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-

SD Memory Card

Camera	SF-8N4	SF-8NX	SF-8U4	SF-8U6	SF-8UX	SF-8UY	SF-G1UX2	SF-G1UY	SR-16A4	SR-16C4
DSC-TF1	X	X	X	X	X	X	-	-	OK	OK
DSC-TX1	X	X	X	X	X	X	-	-	X	X
DSC-TX10	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-TX100V	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-TX20	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK	OK
DSC-TX200V	X	X	X	X	X	X	-	-	OK	OK
DSC-TX30	X	X	X	X	X	X	-	-	OK	OK
DSC-TX5	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-TX55	X	X	X	X	X	X	-	-	-	-
DSC-TX66	X	X	X	X	X	X	-	-	OK	OK
DSC-TX7	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-TX9	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-V1	X	X	X	X	X	X	-	-	X	X
DSC-V3	X	X	X	X	X	X	-	-	X	X
DSC-W1	X	X	X	X	X	X	-	-	X	X
DSC-W110	X	X	X	X	X	X	-	-	X	X
DSC-W120	X	X	X	X	X	X	-	-	X	X
DSC-W170	X	X	X	X	X	X	-	-	X	X
DSC-W180	X	X	X	X	X	X	-	-	X	X
DSC-W190	X	X	X	X	X	X	-	-	X	X
DSC-W200	X	X	X	X	X	X	-	-	X	X
DSC-W210	X	X	X	X	X	X	-	-	X	X
DSC-W215	X	X	X	X	X	X	-	-	X	X
DSC-W220	X	X	X	X	X	X	-	-	X	X
DSC-W230	X	X	X	X	X	X	-	-	X	X
DSC-W270	X	X	X	X	X	X	-	-	X	X
DSC-W275	X	X	X	X	X	X	-	-	X	X
DSC-W290	X	X	X	X	X	X	-	-	X	X
DSC-W30	X	X	X	X	X	X	-	-	X	X
DSC-W310	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-W320	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-W330	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-W35	X	X	X	X	X	X	-	-	X	X
DSC-W350	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-W370	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-W390	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-W5	X	X	X	X	X	X	-	-	X	X
DSC-W50	X	X	X	X	X	X	-	-	X	X
DSC-W510	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-W530	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-W550	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-W560	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-

SD Memory Card

Camera	SF-8N4	SF-8NX	SF-8U4	SF-8U6	SF-8UX	SF-8UY	SF-G1UX2	SF-G1UY	SR-16A4	SR-16C4
DSC-W570	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-W570D	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-W610	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W620	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W630	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W650	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W670	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W690	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W7	X	X	X	X	X	X	-	-	X	X
DSC-W710	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W730	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-W80	X	X	X	X	X	X	-	-	X	X
DSC-W800	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-W80HDPR	X	X	X	X	X	X	-	-	X	X
DSC-W830	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-WX1	X	X	X	X	X	X	-	-	X	X
DSC-WX10	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-WX100	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX150	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX200	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX220	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-WX300	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX350	OK	OK	OK	OK	OK *5	OK	-	-	OK *4	OK *4
DSC-WX5	OK	OK	OK *5	OK *5	-	OK *5	-	-	-	-
DSC-WX50	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX60	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX7	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-
DSC-WX70	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX80	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	OK *4	OK *4
DSC-WX9	OK	OK	OK *5	OK *5	OK *5	OK *5	-	-	-	-

[illegible][illegible]

SD Memory Card
----------------

[illegible]

SD Memory Card
----------------

[illegible]



SD Memory Card
----------------

[illegible]

SD Memory Card
----------------

[illegible]

[illegible][illegible]

SD Memory Card	
----------------	--

[illegible]

SD Memory Card
----------------

[illegible]

SD Memory Card

Camera	SR-8A4	SR-8A4D	SR-8C4	SR-8N2	SR-8UY	SR-8UYA	SRAC-A1
DSC-F707	X	X	X	X	X	X	X
DSC-F717	X	X	X	X	X	X	X
DSC-F828	X	X	X	X	X	X	X
DSC-F88	X	X	X	X	X	X	X
DSC-G1	X	X	X	X	X	X	X
DSC-G3	X	X	X	X	X	X	X
DSC-H1	X	X	X	X	X	X	X
DSC-H10	X	X	X	X	X	X	X
DSC-H20	X	X	X	X	X	X	X
DSC-H200	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-H3	X	X	X	X	X	X	X
DSC-H300	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-H400	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-H5	X	X	X	X	X	X	X
DSC-H50	X	X	X	X	X	X	X
DSC-H55	-	-	-	-	-	-	OK
DSC-H7	X	X	X	X	X	X	X
DSC-H70	-	-	-	-	-	-	OK
DSC-H90	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX1	X	X	X	X	X	X	X
DSC-HX100V	-	-	-	-	-	-	OK
DSC-HX10V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX200V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX20V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX300	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX30V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX400V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX50V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX5V	-	-	-	-	-	-	OK
DSC-HX60V	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-HX7V	-	-	-	-	-	-	OK
DSC-HX9V	-	-	-	-	-	-	OK
DSC-J10	X	X	X	X	X	X	X
DSC-L1	X	X	X	X	X	X	X
DSC-M1	X	X	X	X	X	X	X
DSC-M2	X	X	X	X	X	X	X
DSC-N1	X	X	X	X	X	X	X
DSC-N2	X	X	X	X	X	X	X
DSC-P10	X	X	X	X	X	X	X
DSC-P100	X	X	X	X	X	X	X
DSC-P150	X	X	X	X	X	X	X
DSC-P200	X	X	X	X	X	X	X

SD Memory Card

Camera	SR-8A4	SR-8A4D	SR-8C4	SR-8N2	SR-8UY	SR-8UYA	SRAC-A1
DSC-P73	X	X	X	X	X	X	X
DSC-P8	X	X	X	X	X	X	X
DSC-QX10	OK	OK	OK	OK *4	OK *5	OK *5	X
DSC-QX100	OK	OK	OK	OK *4	OK *5	OK *5	X
DSC-R1	X	X	X	X	X	X	X
DSC-RX1	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-RX10	OK *4	OK *4	OK *4	OK *46 *4	OK *4	OK *4	OK
DSC-RX100	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-RX100M2	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-RX100M3	OK *46 *5	OK *46 *5	OK *46 *5	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-RX1R	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-S2000	-	-	-	-	-	-	OK
DSC-S2100	-	-	-	-	-	-	OK
DSC-S40	X	X	X	X	X	X	X
DSC-S730	X	X	X	X	X	X	X
DSC-S930	X	X	X	X	X	X	X
DSC-S950	X	X	X	X	X	X	X
DSC-S980	X	X	X	X	X	X	X
DSC-T1	X	X	X	X	X	X	X
DSC-T10	X	X	X	X	X	X	X
DSC-T100	X	X	X	X	X	X	X
DSC-T110	-	-	-	-	-	-	OK
DSC-T110D	-	-	-	-	-	-	OK
DSC-T2	X	X	X	X	X	X	X
DSC-T20	X	X	X	X	X	X	X
DSC-T200	X	X	X	X	X	X	X
DSC-T3	X	X	X	X	X	X	X
DSC-T30	X	X	X	X	X	X	X
DSC-T300	X	X	X	X	X	X	X
DSC-T33	X	X	X	X	X	X	X
DSC-T5	X	X	X	X	X	X	X
DSC-T50	X	X	X	X	X	X	X
DSC-T500	X	X	X	X	X	X	X
DSC-T7	X	X	X	X	X	X	X
DSC-T70	X	X	X	X	X	X	X
DSC-T700	X	X	X	X	X	X	X
DSC-T77	X	X	X	X	X	X	X
DSC-T9	X	X	X	X	X	X	X
DSC-T90	X	X	X	X	X	X	X
DSC-T900	X	X	X	X	X	X	X
DSC-T99	-	-	-	-	-	-	OK
DSC-T99D	-	-	-	-	-	-	OK

SD Memory Card

Camera	SR-8A4	SR-8A4D	SR-8C4	SR-8N2	SR-8UY	SR-8UYA	SRAC-A1
DSC-TF1	OK	OK	OK	OK *4	OK *5	OK *5	X
DSC-TX1	X	X	X	X	X	X	X
DSC-TX10	-	-	-	-	-	-	OK
DSC-TX100V	-	-	-	-	-	-	OK
DSC-TX20	OK	OK	OK	OK *4	OK *5	OK *5	OK
DSC-TX200V	OK	OK	OK	OK *4	OK *5	OK *5	X
DSC-TX30	OK	OK	OK	OK *4	OK *5	OK *5	X
DSC-TX5	-	-	-	-	-	-	OK
DSC-TX55	-	-	-	-	-	-	X
DSC-TX66	OK	OK	OK	OK *4	OK *5	OK *5	X
DSC-TX7	-	-	-	-	-	-	OK
DSC-TX9	-	-	-	-	-	-	OK
DSC-V1	X	X	X	X	X	X	X
DSC-V3	X	X	X	X	X	X	X
DSC-W1	X	X	X	X	X	X	X
DSC-W110	X	X	X	X	X	X	X
DSC-W120	X	X	X	X	X	X	X
DSC-W170	X	X	X	X	X	X	X
DSC-W180	X	X	X	X	X	X	X
DSC-W190	X	X	X	X	X	X	X
DSC-W200	X	X	X	X	X	X	X
DSC-W210	X	X	X	X	X	X	X
DSC-W215	X	X	X	X	X	X	X
DSC-W220	X	X	X	X	X	X	X
DSC-W230	X	X	X	X	X	X	X
DSC-W270	X	X	X	X	X	X	X
DSC-W275	X	X	X	X	X	X	X
DSC-W290	X	X	X	X	X	X	X
DSC-W30	X	X	X	X	X	X	X
DSC-W310	-	-	-	-	-	-	OK
DSC-W320	-	-	-	-	-	-	OK
DSC-W330	-	-	-	-	-	-	OK
DSC-W35	X	X	X	X	X	X	X
DSC-W350	-	-	-	-	-	-	OK
DSC-W370	-	-	-	-	-	-	OK
DSC-W390	-	-	-	-	-	-	OK
DSC-W5	X	X	X	X	X	X	X
DSC-W50	X	X	X	X	X	X	X
DSC-W510	-	-	-	-	-	-	OK
DSC-W530	-	-	-	-	-	-	OK
DSC-W550	-	-	-	-	-	-	OK
DSC-W560	-	-	-	-	-	-	OK



SD Memory Card

Camera	SR-8A4	SR-8A4D	SR-8C4	SR-8N2	SR-8UY	SR-8UYA	SRAC-A1
DSC-W570	-	-	-	-	-	-	OK
DSC-W570D	-	-	-	-	-	-	OK
DSC-W610	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W620	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W630	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W650	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W670	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W690	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W7	X	X	X	X	X	X	X
DSC-W710	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W730	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W80	X	X	X	X	X	X	X
DSC-W800	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-W80HDPR	X	X	X	X	X	X	X
DSC-W830	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX1	X	X	X	X	X	X	X
DSC-WX10	-	-	-	-	-	-	OK
DSC-WX100	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX150	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX200	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX220	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX300	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX350	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX5	-	-	-	-	-	-	OK
DSC-WX50	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX60	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX7	-	-	-	-	-	-	OK
DSC-WX70	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX80	OK *4	OK *4	OK *4	OK *46 *4	OK *46 *5	OK *46 *5	OK
DSC-WX9	-	-	-	-	-	-	OK